

Grab Bar Modern Cast Zinc+Steel
Design Backings Composition



www.sydneybathaccessories.com

Sydney installation instructions

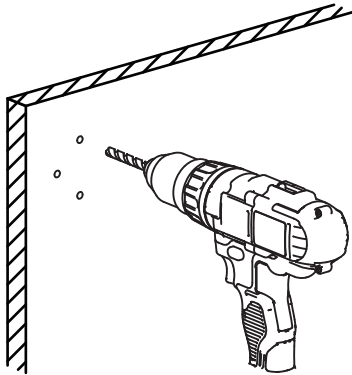


Figure 1.
Mark (on the wall) locations of plugs through mounting plate using a pencil, drill 3/16" holes, make sure to keep drill level.

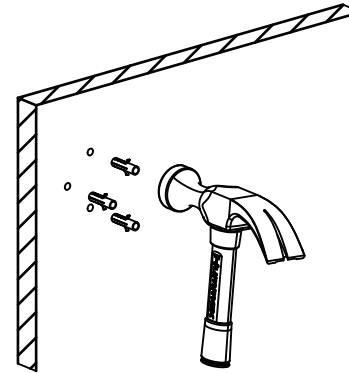


Figure 2.
Insert plugs into drilled holes, using a hammer to tap the plugs in, be careful not to break tile.

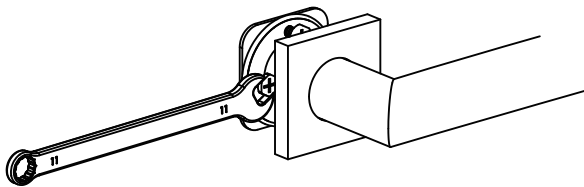


Figure 3.
Driver bolt nut directly into holes.






Figure 4.
Tighten the cover on the Mounting plate

Grab Bar Modern Cast Zinc+Steel
Design Backings Composition





www.sydneybathaccessories.com



Sydney installation instructions





SYD-GB1





SYD-GB2



SYD-GB3

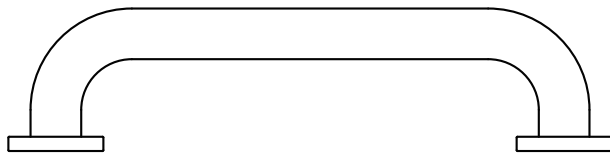

SYD-GB4

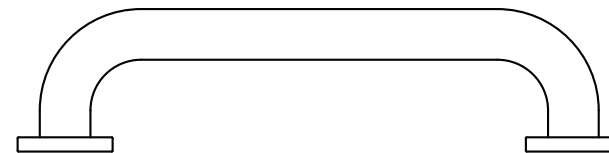

SYD-GB5